


LEDI SCOUT

QUICK START GUIDE


Step 1. Remove bungs and pre-filter housing.

1.

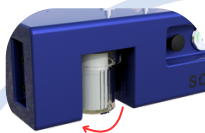



Loosen

2.

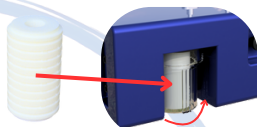


Step 2. Install a new pre-filter. Connect hoses (push firmly into fittings). Place all three hoses in the ocean or a dechlorinated fresh water source.

2.

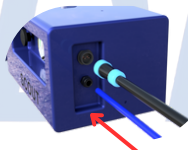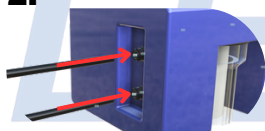

Step 3. Ensure switches are off (toggle up) and valve is open (turned counterclockwise). Connect the power cable and ensure power is supplied.

3.

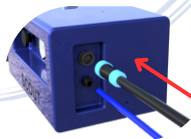

LEDI SCOUT

QUICK START GUIDE

WARNING DO NOT run the system dry (without water).

Step 4. Toggle the left switch down to start the supply pump. Release trapped air by pressing down on the pre-filter air bleed valve. Wait for 5 minutes.



Step 5. Toggle the right switch down to start the high pressure pump. Wait for 5 minutes.



Step 6. Close the needle valve (turn clockwise). Pressure will increase and stabilise. Water will be produced from the output water line. Discard any water produced for the first 30 minutes.

